



655 SOUTH LINCOLN AVE / SAN BERNARDINO CA. 92408  
PHONE: 1-877-470-2975 FAX: 909-890-0759 EMAIL: www.gloablwest.net

PART#1046RD


## INSTALLATION INSTRUCTIONS FOR 1985-93 MUSTANG FRONT LOWER DEL-A-LUM A-ARM BUSHING KIT

### KIT PROVIDES:

1 press tool	4 thrust washers .100 thick
4 grease fittings	2 thrust washers .550 thick
4 bushing inserts	2 thrust washers .800 thick

To install your bushing kit the front lower control arms will have to be removed from the vehicle. If you are unsure about the proper procedures for accomplishing this, consult a quality shop manual for assistance.

1. Remove the control arms from the vehicle and clean thoroughly.
2. Press out stock bushings.(hydraulic press recommended)
3. Press in the new bushing.(hydraulic press required) Make sure that the grease fittings, when installed, will be in the correct place for easy access for lubrication. **NOTE:** When installing new bushings, use the press tool provided (angle iron) in between the ears of the a-arm to act as a spacer. This will assist you.
4. Lubricate the inserts by hand and slip them into place. Following the diagram provided, install the thrust washers in their proper location.

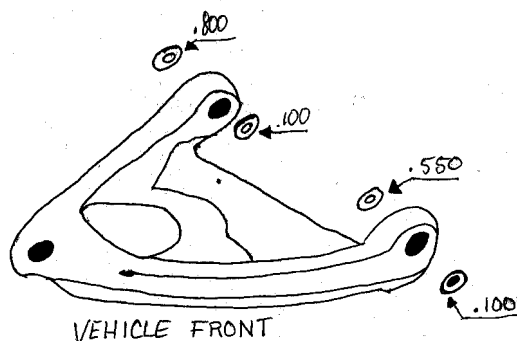

5. Thrust washers are installed between the frame and the control arm. The installation procedure is the same at all bushing locations.

6. Install the control arms using the original bolts and nuts. Torque all fasteners to factory specifications. Install the grease fittings in the bushings and lubricate again via grease fittings.

Suggested lubrication interval is every 5000 miles. Use synthetic waterproof grease for maximum protection.